

INSTRUCTION MANUAL

L-UPL UPLIGHT



L-UPL-10

- Power: 1.2W
- Beam angle: 10 to 60°
- Input: 350mA constant current, 1.25W
- Compatible PWM external dimmer
- $CRI \geq 96$
- CCT: 3000K, 4000K, 5000K
- Indoor use, IP30
- Material: Alum. Alloy / PC



L-UPL-10-4

- Power: 4*1.2W
- Beam angle: 10 to 60°
- Input: 350mA constant current, 4.9W
- Compatible PWM external dimmer
- $CRI \geq 96$
- CCT: 3000K, 4000K, 5000K
- Indoor use, IP30
- Material: Alum. Alloy / PC

IMPORTANT: Always use with UL power unit, 350mA constant current.

IMPORTANT SAFETY INSTRUCTIONS

- Read all instructions.
- Do not conceal or extend exposed conductors through a building wall.
- Do not install this system in wet locations.
- To reduce the risk of fire and burns, do not install this lighting system where the exposed bare conductors can be shorted or contact any conductive materials.
- To reduce the risk of fire and overheating, make sure all connections are tight.
- Do not install any luminaire closer than 6 in (152 mm) from any curtain, or similar combustible materials.
- Turn off electrical power before modifying the lighting system in any way.

SAVE THESE INSTRUCTIONS

For the safe handling, installation and operation of the L-UPL UPLIGHT a thorough review and understanding of the material written in this manual must be completed before starting the installation process. Failure to install the L-UPL UPLIGHT per these instruction will void your warranty. There are no serviceable components in the L-UPL UPLIGHT. Attempting to repair or alter the system in any way will also void your warranty. Always install the L-UPL UPLIGHT according to all local, state, and national codes.

INSTRUCTION MANUAL

L-UPL UPLIGHT

